ARK ROCKET

SATURN V JUKEBOX


Quick Unboxing Guide

01 BEFORE FIRST USE

Release the Safety Screw

Lift the lid. Next to the tone arm, behind the platter, there is a **Safety Screw**. Turn it **clockwise** with a coin or screwdriver until the platter **floats freely**.

This screw is for transport only. It is not an adjustment for the player.

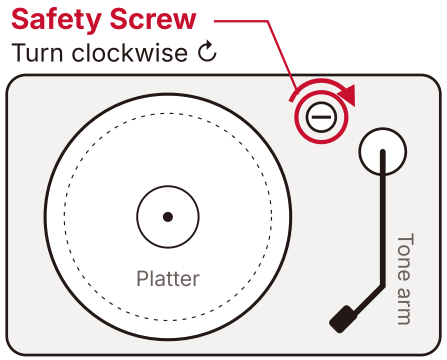

02

Powering On

Press the **red power button** on the left to turn on the jukebox.

Press the **lighting button** on the right to activate the lighting system.

03

Waking Up the Media Center

Press the **Standby** button to wake up the media center.

04

Changing Playback Mode

Press the **Mode** button to switch playback modes.

PH	Phono mode (vinyl)
BT	Bluetooth mode
– –	CD mode (blinking)

05

Stylus Care

The turntable's stylus is a consumable item and is **not covered under warranty**. Please avoid touching the tip of the stylus directly.

If the stylus is damaged, replacement parts can be found in the accessories section.

Stylus model: AR-N60S

WARRANTY & SUPPORT

For warranty, technical support, or to find parts, please feel free to contact us.

WEB
arkrocket.com/support

EMAIL
support@arkrocket.com

Scan for support & replacement parts